



USER GUIDE

Revision 2.1

MySirius

CONTENTS

I. Definitions	4
1. Unit / Monitored unit	4
2. Measurement point	4
3. Virtual Measurement point	4
4. Measurement chain	4
5. Unit model	4
6. Zone	4
7. User.....	5
8. Unit batch.....	5
9. Technical batches.....	5
10. Threshold alarms.....	5
a) Allowed overrun duration.....	5
b) MKT Threshold	6
c) Threshold criticality.....	6
11. Technical alarms.....	6
12. Time zones	6
II. Definition of the customer interface	7
1. The menu bar	7
2. The window body	8
III. Application access.....	9
IV. «Monitoring» menu.....	11
1. «Thumbnail» display mode	11
a) Single-point unit.....	12
b) Multi-point unit	13
2. « Table » mode.....	14
3. « Map» mode	15
4. « Unit » data sheet	16
a) Location	16
b) Measurements	17
c) Options.....	18
d) Last alarms	19
e) Configuration.....	19
V. Alarm management	20
1. Acknowledge / Take in charge a threshold alarm	20
2. Snoozing an alarm	20
3. Justifying an alarm	21
4. Validate or Take in charge for technical alarms	21
VI. « System » menu.....	22
1. « Thumbnail » mode	22
2. « Mini-thmbnail » mode.....	23
3. « List » mode.....	23
4. « Map » mode.....	23
VII. « Analysis » menu	24
1. Standard operation	24
a) Manual Data Download.....	26
b) Options.....	26
2. Archive management.....	26
a) Archive creation	26
b) Loading an archive.....	27
VIII.Indicator management	28
IX. Audit trail	30
1. Access.....	30
2. Export	30
X. User account management.....	31
1. Personal data.....	31
2. Alert management	31
3. User preferences	32

4. Documents	33
5. Messages	33
XI. Maintenance module	35
1. Reporting	35
2. Report management	35
a) Creating a report	35
b) Deleting a report	35
c) Editing a report	35

I. DEFINITIONS

1. Unit / Monitored unit

A monitored unit is an equipment, an enclosed space monitored by one or several measurement point(s) (ex.: cold room, incubator, refrigerator, freezer, building...)

It will be possible to give it a name, an inventory number (optional) and an indicator of «special metrological requirement» if applicable and an operation schedule if it is not used continuously.

To exist in JRI MySirius, a monitored unit needs to have at least one measurement point.

2. Measurement point

A measurement point is the area of the monitored unit where the measurements of a physical quantity are performed. At least one measurement is required to be positioned in a monitored unit but there can be several measurement points in a monitored unit.

In a monitored unit, the measurement point(s) receive all information regarding the configuration: measurement units, recording frequencies, alarm thresholds...

Each measurement will be thus linked to a measuring point.

A measurement point uses a measurement chain to carry out the measurements.

3. Virtual Measurement point

A virtual measurement point allows the simulation of T° values using the the real measurement point readings. This is done by an algorithm to be specified for each product type.

4. Measurement chain

A measurement chain is a group consisting of a measuring device (sensor) and a device which interpretes the measurements in order to supply useable values for display or recording.

A measurement chain can be composed of a complete device with integrated probe (non exchangeable) or a device and an external probe connected to the device (plug-in or not).

Metrological operations (calibration, adjustment, and verification) are performed on the measurement chains.

A measurement chain must be linked to a measuring point for the measurements to be accepted by JRI MySirius.

5. Unit model

A monitored unit model enables the simultaneous creation of several identical units in terms of:

- the number of measurement points,
- the configuration of these measurement points.

It contains much of the same information as a monitored unit with the following exceptions:

- it is not placed in a zone by default,
- it belongs to no batch,
- it is not linked to one or several measurement chains in particular but to one or more types of measurement chains.

6. Zone

A zone is a geographic localization in which the monitored units can be «physically» placed.

In JRI MySirius, the user can define, as he wishes, the geographical organization of his installed base. To do so, he can create a tree structure where each level corresponds to: a site, a building, a level (floor), a zone, an office... Each part or subpart of the tree is considered as a zone.

A tree belongs to a domain (the user's global perimeter for running JRI MySirius).

Each level of the tree can be named and identified. The domain administrator is not limited in regard to the number of zones he can create.

Example :

- Domain (JRI),
 - Site 1 (Feschés-Le-Châtel)
 - * Metrology
 - RM office
 - Laboratory
 - * Engineering
 - Electronic Development Department
 - Software Application Development Department
 - Site 2 (Bezons)
 - * Marketing
 - * Export

7. User

A user is a person who can connect to JRI MySirius.

A user can only have access to data from the domain belonging to him. He has a profile which lets him know his rights (ex.: the right to add a device, the right to acknowledge an alarm...). His actions are limited by his rights.

Each user has personal data (first and last names, email, telephone number...) and manages his weekly schedule and his lists of alert means (email, sms, voice call) to be used in the event of an alarm. He must fill them out to guarantee the correct functioning of JRI MySirius.

A user can have access to a certain number of batches in which are placed the monitored units he wants to see. He can define a home page by default which is displayed at each of his connections. This home page is modifiable in his profile

The user is also assigned to a zone of the geographical organization of the domain which allows direct access to the monitored units which are assigned to him.

8. Unit batch

A monitored unit batch is a group of units that enables the organization of the monitoring system. There is no limit on either the number of batches or the number of units per batch.

A batch can contain units from several different zones and a monitored unit can belong to several batches.

Each «Domain» has a default batch named «default batch» which cannot be deleted but which can be renamed.

A monitored unit is required to be in a batch. When a monitored unit is created, it is automatically placed in the batch. It can subsequently be assigned to other batches.

9. Technical batches

Technical batches intend to group technical devices which are not directly linked to a monitored unit: equipment for communication, relay, alarm...

10. Threshold alarms

a) Allowed overrun duration

This concerns the duration of a threshold overrun acceptable by the monitored products before an alarm is triggered. In other software, this notion is also called « Alarm delay ».

- **Allowed duration of continuous overrun**

An alarm with an « allowed duration of continuous overrun » is triggered when the measured value remains above a threshold during the entire defined time duration, without interruption.

The allowed overrun duration is reinitialized if the measured value returns to normal before the end of the countdown.

- The allowed overrun duration (delay) is a multiple of the measurement frequency of the measurement point.
- **Allowed cumulative overrun duration**

An alarm with a « cumulative overrun duration » is triggered when the sum of the different overrun durations for a given threshold exceeds the defined time duration over a given recording period (sliding period):

Ex: Authorized overrun duration = 1h over a 24h period.

The alarm will be triggered when the measurement point exceeds the threshold for more than 1h (by a single occurrence or « x » occurrences) over the past 24 hours.

- The authorized overrun duration is set by default to be continuous; if a cumulative duration is desired, this must be specified.
- A maximum duration of alarm treatment (sliding period of cumulative threshold overruns, example: 1 hour of overrun over 24h, 1 week...)

b) MKT Threshold

A MKT overrun alarm is triggered when the MKT calculated over a sliding period defined by the user exceeds the defined threshold value.

c) Threshold criticality

For each threshold, the user can define whether or not it is critical. This allows the differentiation between critical and non critical thresholds for the notification of the different persons in the alert management.

11. Technical alarms

A technical alarm is an alarm which involves the equipment, as opposed to threshold alarms which apply to performed measurements.

Among the technical alarms are those related to the state of the battery, a sensor problem, a communication problem... but also other alarm types such as metrological or maintenance alarms.

- **Battery alarm:** The energy level of the device batteries is continuously monitored by JRI MySirius. As soon as the value passes below 10% remaining energy, the device enters the technical alarm and flashes blue. The treatment of the technical alarm is then managed by JRI MySirius.

 When a device enters the technical alarm, there remain about 4 to 6 weeks of autonomy to allow for changing the battery.

- **Sensor error:** The devices are capable of detecting the integrity of their sensor(s). If they detect an error, they send a technical alarm message to JRI MySirius which triggers a technical alarm and displays it on the screen (see technical alarm management)
- **Sensor error:** The devices are capable of detecting the integrity of their sensor(s). If an error is detected, they will send a technical alarm message to JRI MySirius which triggers a technical alarm and displays it on the screen (see Alarm Management)
- **Communication error :** Communication errors are managed and detected by JRI MySirius, which detects an absence of received data. Activation allows notification when this situation occurs, providing assurance that all the measurements are correctly transmitted. To activate (see General preferences


12. Time zones

The dates of the measurements are displayed as a function of the time zone defined at the creation of the customer account, whatever the country from which the user desires to view the measurements.

Ex: if a customer from Paris views his data from New York, the dates and times will be those of Paris.

II. DEFINITION OF THE CUSTOMER INTERFACE

The navigation pages of MySirius are composed of different zones

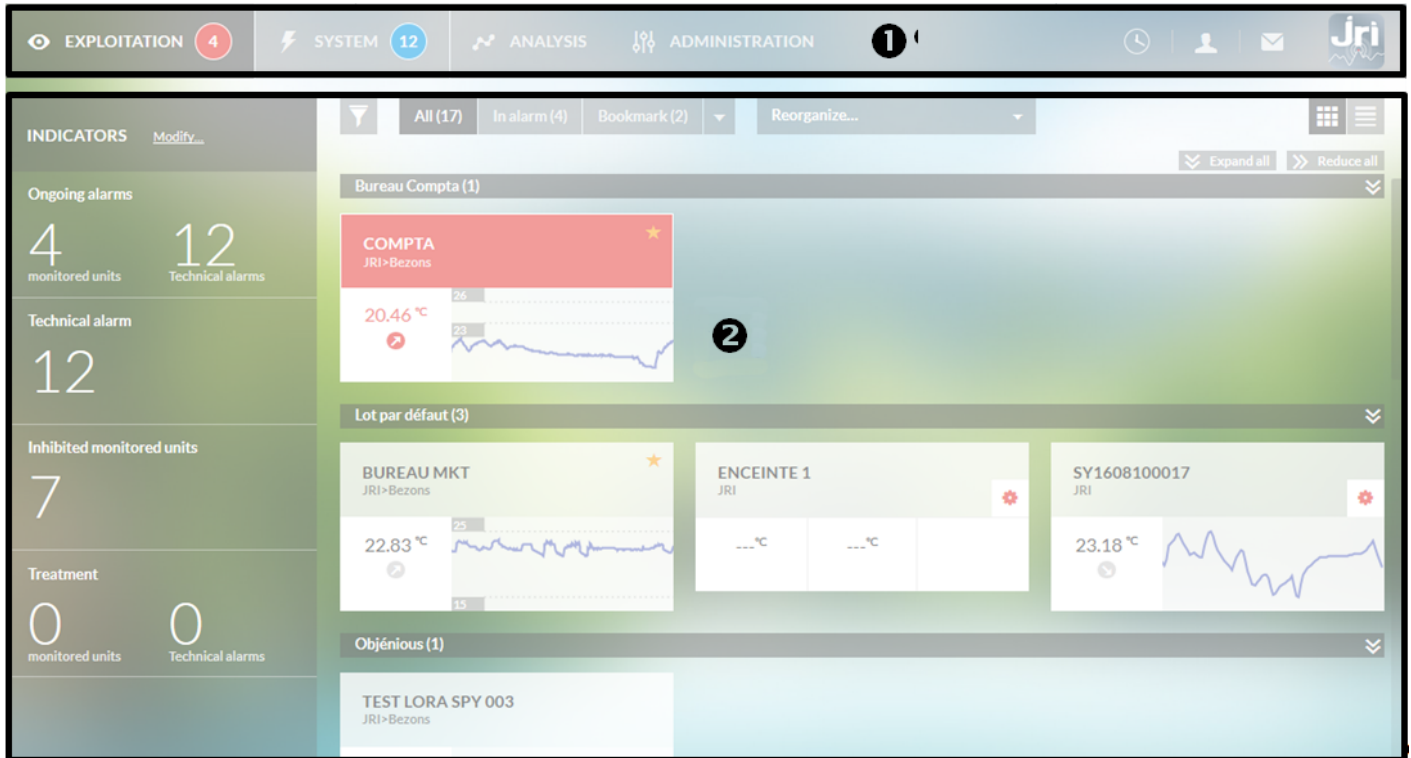


1 The menu bar

2 Window body

1. The menu bar

 The menu bar is present on all pages of the MySirius application




The menu bar contains:

- The different modules of the base pack («Exploitation», «System», «Analysis», «Administration») as well as all optional modules which have been activated. Each module will be visible only if the user has access rights (ex: A user profile cannot access the “Administration” module). To see the modules which are not visible, click on “>>”
-  A «Clock» button to see the requests which have been treated or are to be treated. The appearance of the button changes as a function of the state of the requests:
 - Static: No request in progress
 - Animated: A request is in progress
 - Red: The last request has failed
-  A «profile» button allowing access to the pull-down menu *account management*
-  An «envelope» button allowing access to the integrated message service to send a message to another user.

2. The window body

The menu bar can change its appearance depending on the modules selected from it. For «Exploitation», «System», and «Analysis», accessible to all users whatever their profiles and rights, the window body looks like this:

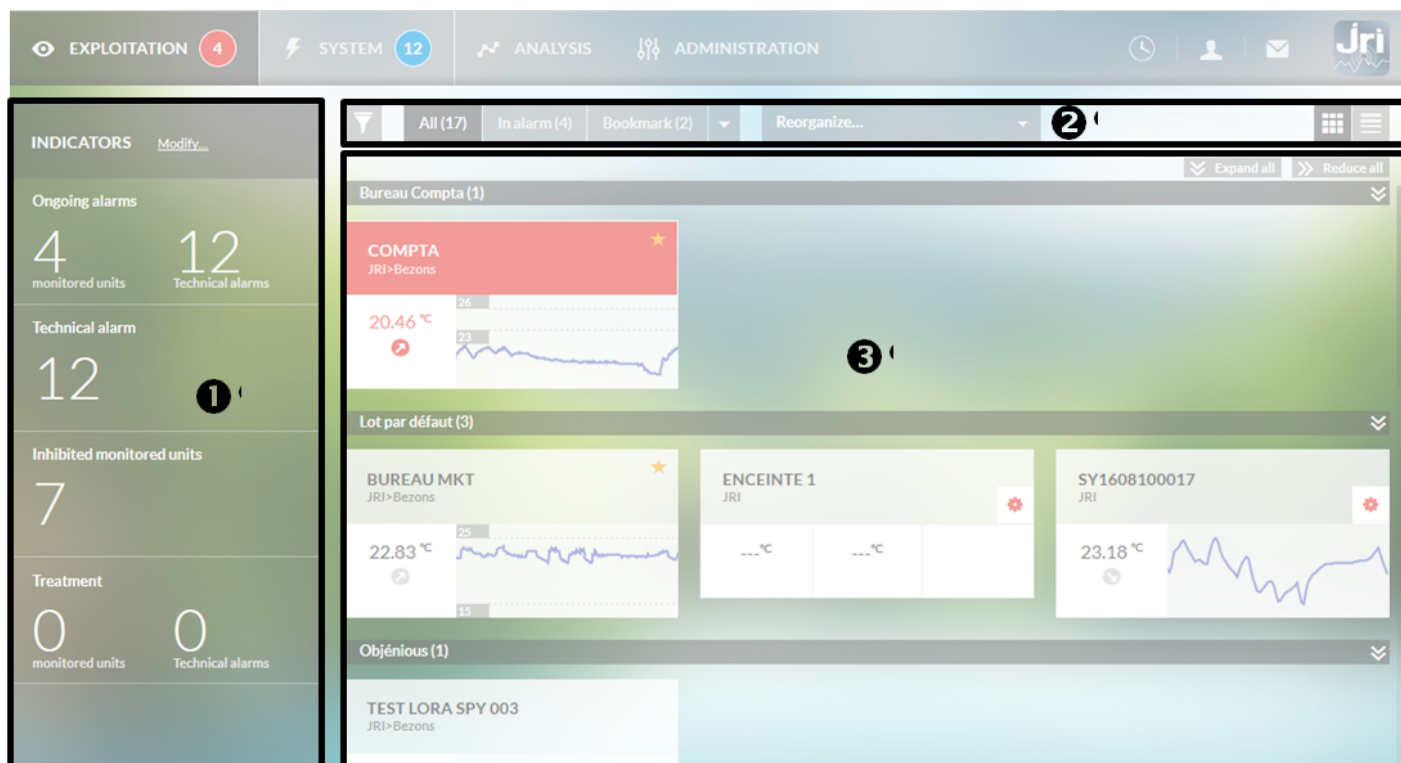

- ❶ List of indicators, devices or units.
- ❷ Action bar for the selected module.
- ❸ Display of the selected action

III. APPLICATION ACCESS

MySirius is accessible at the following address : <http://www.jri-mysirius.com>

Or by scanning the QR Code located on the label of one of the devices of the Nano SPY or LoRa® SPY product range




The home page opens



Each MySirius user possesses a login ID, a password and a domain membership. In the event of the loss of his password, the user can request a new password.

The MySirius home page allows authentication in order to access the application but also to create an account after reception of the material. Customers who have acquired ready to use (prepaid solutions) can create their account directly from this page by clicking on **"Create My Account"**

Once authenticated, all users are directed to the dashboard on the "Operations" page except the supervisors. As their profile allows, supervisors can track different sites or facilities. Once authenticated, these users enter MySirius on a page showing all the sites they supervise.

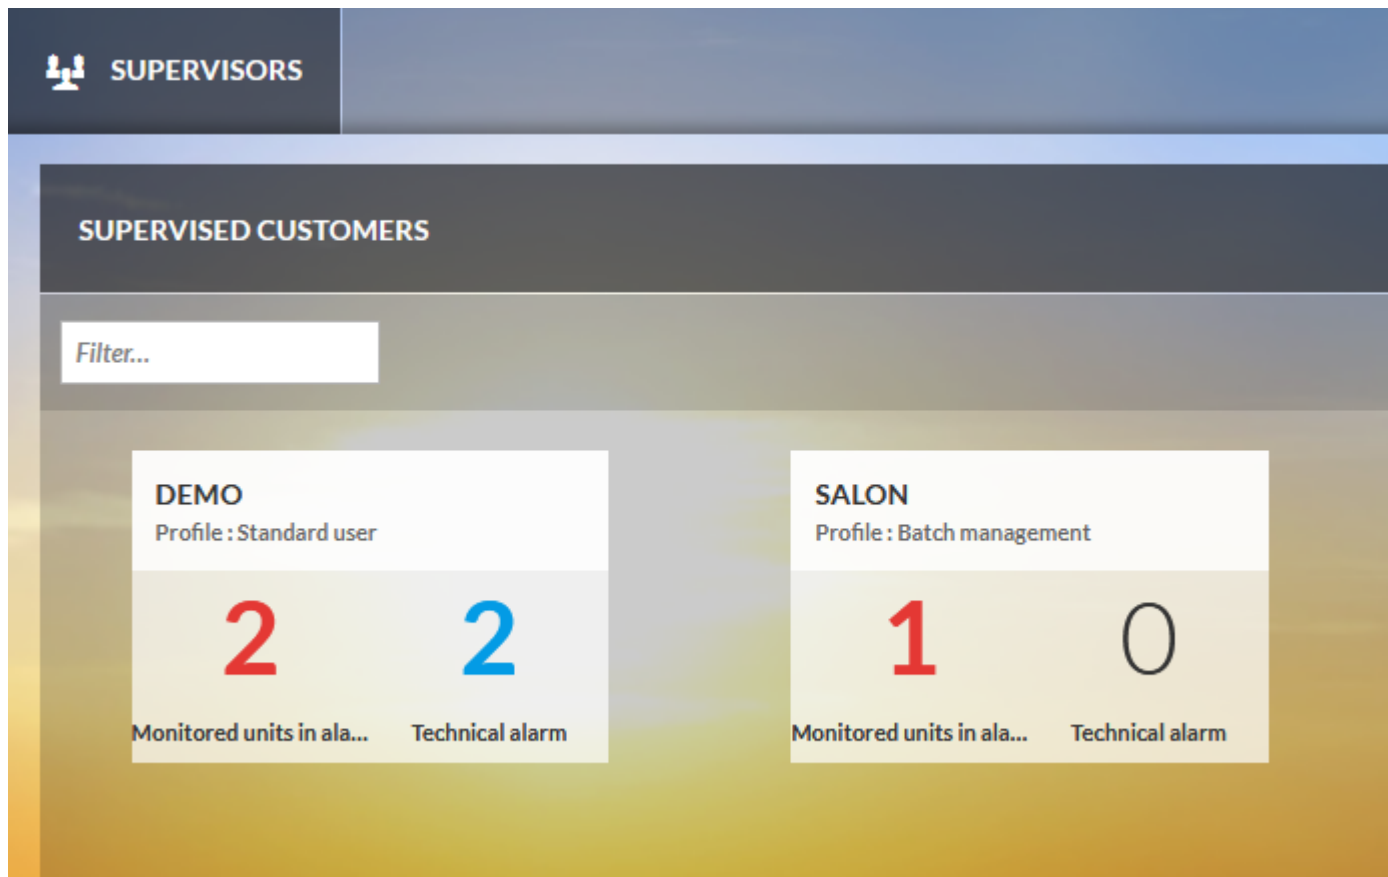

Each vignette represents a supervised site and indicates:

1. The name of the site
2. The profile and rights that the supervisor will have when entering the site
3. The number of threshold alarm and technical alarm of the site

A click on a vignette opens the site in the page "**Exploitation**".

IV. «MONITORING» MENU




From the «Exploitation» menu one can view the monitored unit values, identify the number of currently occurring threshold alarms and treat them.



Number of currently occurring threshold alarms




The page is divided in 2:

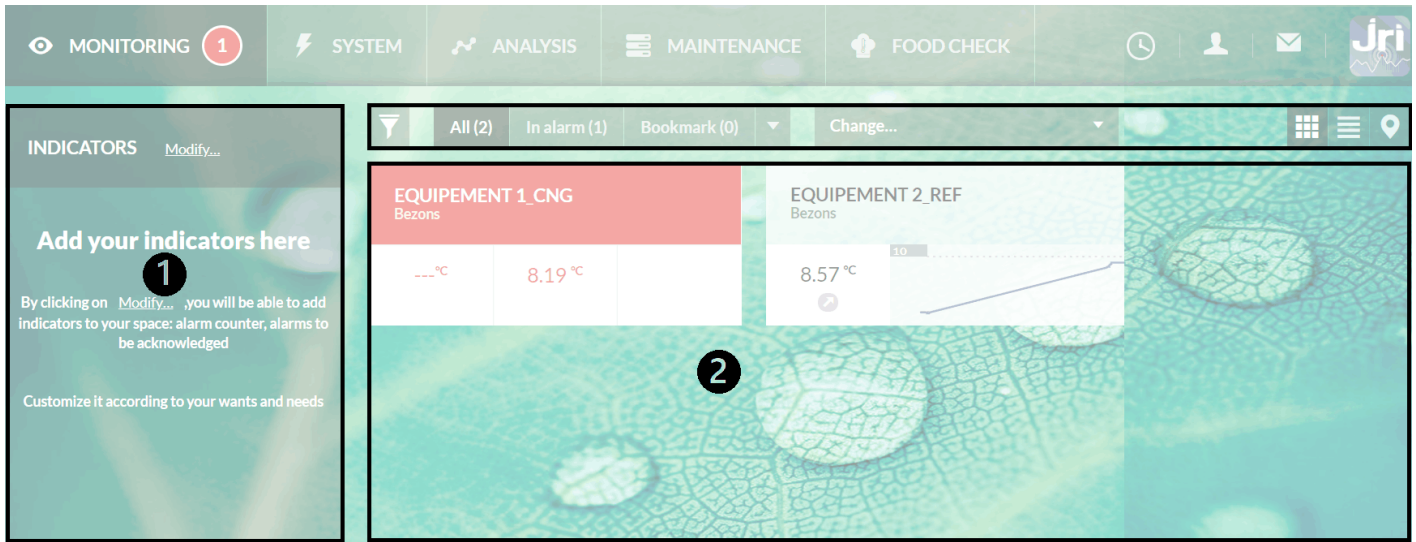

A block on the left with user indicators **1** and on the right the monitored units **2** with their relevant information. The choice of indicators is described in the paragraph *Indicator management*. These choices are individual for each user.

The section on the right allows the display of the monitored units.

   The action line contains:

-  A search button to view one or more units not visible on the screen.
-    A group of buttons for filtering the visible units: «Park», «In Alarm», «Inhibited», «Favorite», «Taken in charge», «Snoozed». For each case, the number of concerned units is displayed.
-  A «Reorganize» button for grouping the monitored units by batch, by model, or by alphabetical order.
-  A display mode selector for choosing between «Vignette», «List», or «Layout» modes. If the «Location» module is not activated, the button corresponding to the layout mode is not available.

Under this line the monitored units corresponding to the current zone and grouped by batches are displayed.

1. «Thumbnail» display mode




For displaying the monitored units in the form of thumbnails

One can have 2 types of unit thumbnails:

- One for units with a single measurement point
- One for units with multiple measurement points.

a) Single-point unit


The display in vignette form provides a summarized and easily interpreted view of the important information regarding the monitored units.

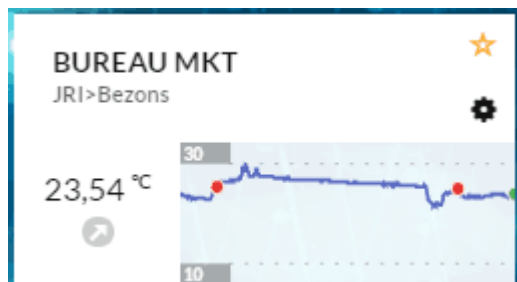

The title bar allows rapid identification of the monitored units.

Just below is displayed the path to its location in the tree of zones defined for the « Domain ». The zone in which the monitored unit is placed is always displayed.

In the lower section, the last measurement received is displayed with its unit and a trend arrow. This “current” value is not necessarily saved and visible on the curve. At mouseover, the time elapsed since its display is shown (ex: « 10 minutes ago »). If the measurement is more than 24h old, it is replaced by « — »

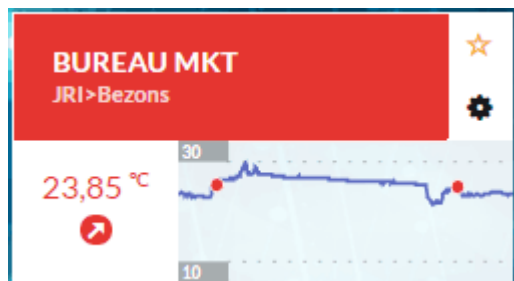

Next to the last measurement, the graph of the last 24h sliding time period is displayed with only the thresholds and the events of the curve (alarm, acknowledgement, ...). For the thresholds, the highest and lowest thresholds are displayed:

In the event of a threshold alarm, the title background and the value change color:

- If the monitored unit has a noncritical threshold alarm, the title bar is displayed in orange.
- If the monitored unit has a critical threshold alarm, the title bar is displayed in red.

If the monitored unit is inhibited, the title bar and the value are displayed in gray with the inhibition icon



 
A mouseover of the icon  reveals the inhibition duration (unlimited or not).

By clicking on the value of the last measurement value, the action button(s) on the alarms is (are) displayed:


- If the monitored unit is in alarm, it is possible (depending on the cases) to acknowledge or « snooze » the monitored unit.



- If the monitored unit is not in alarm, only inhibition of the alarms is possible.



The actions on the alarms are described in the paragraph *Alarm and alert management*.

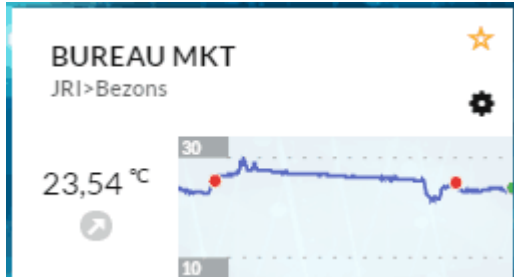

At mouseover of the vignette, a block of 2 buttons appears at the upper right enabling designation of the monitored unit as favorite (yellow star) or opening the *unit configuration* on the « Configuration » tab (black wheel).

If the monitored unit is already in the favorites, the yellow star is full and permanently displayed.

Clicking on the name of the monitored unit or on the graph opens *the monitored unit data sheet* the measurement tab


b) Multi-point unit

As it is the case for the monopoint unit, the name of the monitored unit and the location path of its zones are displayed in the title bar of the vignette.




Each measurement point is displayed below the title bar with the last received value, trend, and the elapsed time of mouseover. This display adapts to the number of measurement points of the monitored unit.

In the event of an alarm, the concerned point(s) change color along with the title bar of the monitored unit vignette. If multiple points are in alarm, the title bar changes to the most serious alarm color: if one point is orange (noncritical alarm) and one point is red (critical alarm), the title bar will be red.

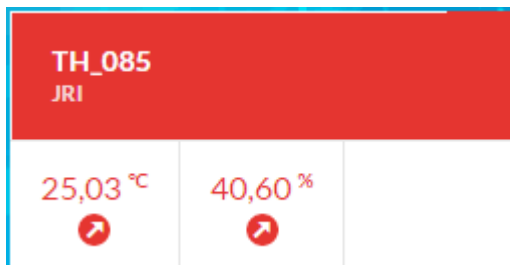

As is the case for the monopoint unit, mouseover of the monitored unit reveals the buttons

for adding the monitored unit to the favorites and accessing the configuration. By default, no curve is displayed relative to the measurement points, but clicking on one of the values will cause the corresponding curve to be displayed.

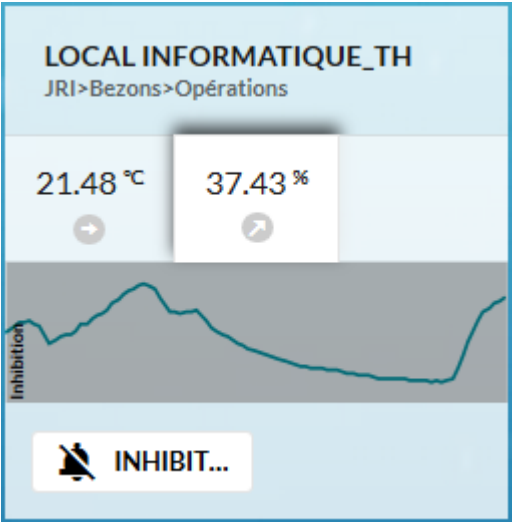

Along with the curve, the alarm treatment buttons (acknowledge, inhibit, or snooze) are displayed according to the monitored unit status.
Clicking on the monitored unit name or on the graph opens the monitored unit sheet to the measurement tab

2. « Table » mode

 Enables display of the monitored units in table or list format.

Monitored unit	Measurement point name	Last measurement	Last 24h	Batches	
Bureau Compta (1)					
Compta★	Compta	20.46 °C 14 minutes ago		Test Bezons Bureau Compta	
Lot par défaut (3)					
Bureau Mkt★	Bureau PhG	22.83 °C 14 minutes ago		Lot par défaut Test Bezons	
enceinte 1	Point Chaud	---- °C -		Lot par défaut	
	Point Froid	---- °C -			
SY1608100017	°C	23.18 °C 14 minutes ago		Lot par défaut	
Objénious (1)					
Test LoRa SPY 003	LoRa SPY 003 Température	---- °C -		Test Bezons Objénious	

The table shows one line for each unit with its name, the batches (in list) to which it belongs and the favorites star if there is one. Each unit line is divided in to as many lines as there are measurement points. For each measurement point, the trend, the last value, the elapsed time since the last value, and the graph are displayed.

 enables the personnalization of the displayed columns (add or delete columns)



enables the exportation of the page contents in CSV format in order to open it in a spreadsheet.

Mouseover of the monitored unit name reveals the alarm action buttons (Acknowledge, Inhibit or Snooze) according to the monitored unit status.

3. « Map » mode




Enables switching to maps display mode to locate the monitored units.

This option is available only if you activate the optionnal MAP MODULE. Monitored units are displayed as mini-thumbnails with information on the status alarms and the las readings.



A click on a monitored unit displays more details with a picture of the unit.

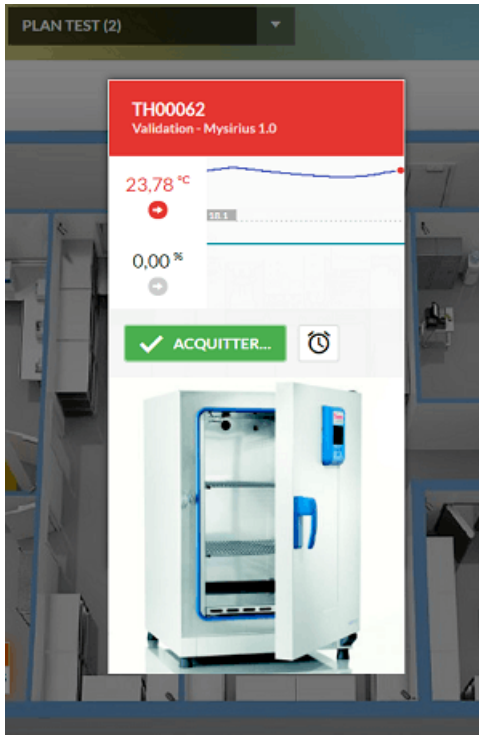

4. « Unit » data sheet

The monitored unit data sheet displays all unit information.

In the left column are the monitored unit name and the location path as well as the list of measurement points along with : their name, the last measurement, the date of the last measurement, and the curve for the last 24 hours (sliding). Each point can be selected or not.

A title bar containing 4 viewable tabs: « Location », « Measurements », « Last alarms » and « Configuration ». The “Location” tab is displayed only if the “Location” module is activated.


Each of the tabs displays the data of the selected measurement points.

The monitored unit data sheet is displayed starting from vignette or list mode:

- Clicking on the monitored unit name:
 - Selects all the measurement points
 - Opens the « Location » tab if the module is active, otherwise it is the « Measurement » tab in curve mode.
- Clicking on the graph:
 - Opens the « Measurement » tab in graph mode.

a) Location


If the MAP module is active, the monitored unit location on the map can be displayed. See « Maps management » on the Administration guide.

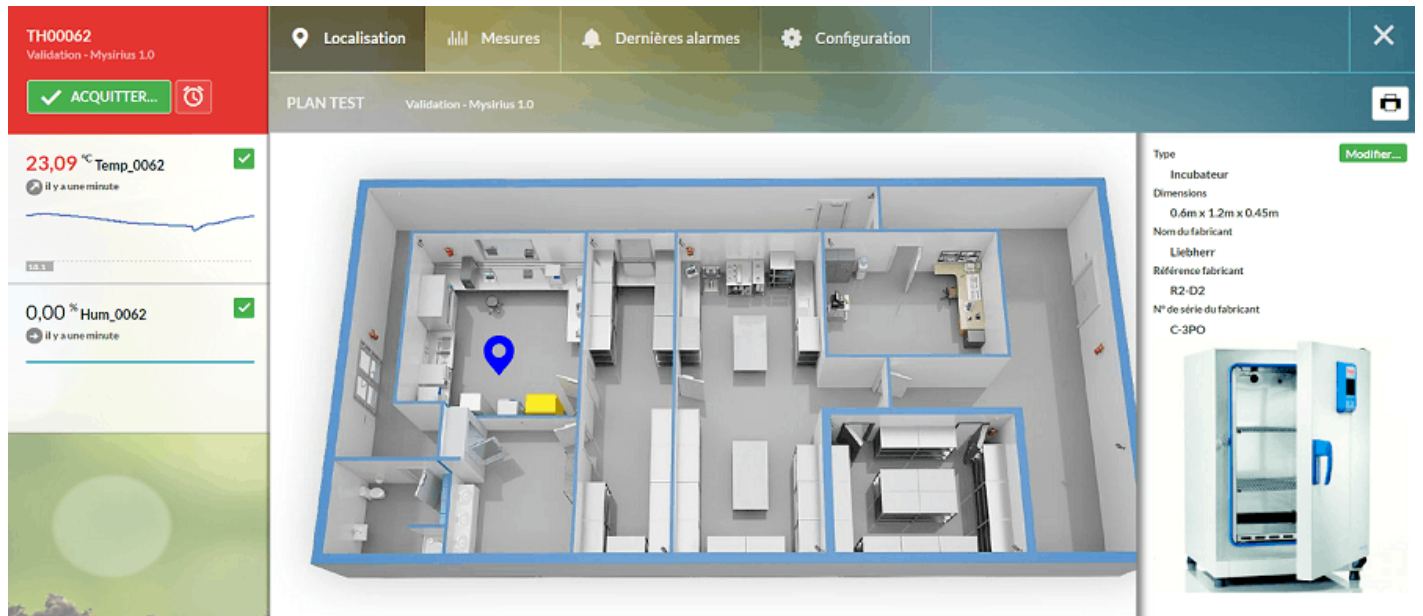

b) Measurements

This tab displays the measurements in either graph or table format. Only the data of the selected points are displayed.

 An action bar enables action on the displayed data.



Choose the displayed period :

- Either by a predefined period
 - Today
 - Yesterday
 - Current week
 - Last week
 - Current month

As a function of the choice, the dates of beginning and end are displayed on the right

- Or by selecting the dates

A « calendar » appears enabling modification of the selection. This item opens the calendar of choice of dates of beginning and end.

✕

Start date

<
DECEMBER 2017
>

Mo	Tu	We	Th	Fr	Sa	Su
27	28	29	30	1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31
1	2	3	4	5	6	7

+
12 December 2017
-

+
0 : 0
-

+
0 : 0
-

End date

<
DECEMBER 2017
>

Mo	Tu	We	Th	Fr	Sa	Su
27	28	29	30	1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31
1	2	3	4	5	6	7

+
13 December 2017
-

+
0 : 0
-

+
0 : 0
-

✓

Choose the display mode

- The buttons   enable the choice of measurement display mode in order to change from graph to table mode and inversely.

This mode change does not modify the selected period.

Choose other actions

- The menu button  enables access to other functions:
 - Print the graph: The printout contains the graph, the monitored unit name and the measurement points (with min, max, average) as well as the start and end dates.
 - Export the measurements in CSV
 - Options: Allows management of the graphic display preferences
 - Add a comment: To add a comment on the curve for a measurement point or for the monitored unit
 - Open the analysis screen: To open the analysis screen with this unit selected.

c) Options

These functionality allows to the user to personalize the graphical display and alarms statistics. He can choose:

- For graphic display**
 - Always display thresholds : signifie that in analysis the lines that show threshold are always visible for all grph selected
 - Event label display : signifie that all the events or commentary are readable. Otherwise you must mouseover the event dot on the graph to display it.
 - Display of measurements at mouseover of the curve : This option specifies which measurement points are displayed at mouseover (all or the closest)
 - The type of scale (dynamic or static) : In dynamic, the scale is adjusted regardin min and max values of the displayed area
- For measurement table display**
 - Activation time alignment : this option allow you to align data that are a little bit not synchronized. You are invite to enter the gap for alignment
- For alarm statistics**
 - Exceeded Time : Sum of all overruns (above or below except allowed overrun duration) over the period displayed in graphic mode

©JRI

User guide - 2.1

18/35

- Time in alarm : Period on which the unit is in alarm since triggering of the threshold (at the end of the allowed overrun duration) until come back on the good side of the threshold. If the period displayed in graphic mode shows more than one alarm, the time in alarm will be the sum of all periods in alarms.
 - Mean acknowledgment time : Time taken by the user to acknowledge the alarm of a unit. This time is from the moment the alarm is triggered (at the end of the allowed overrun duration) until the acknowledgment by the user over the period displayed in graphic mode. If on this periode there is more than one acknowledgment, it will be the mean time of all acknowledgments.
- These three criteria can be calculated:
- * by differentiating or not high and low thresholds
 - * by differentiating critical and non-critical thresholds

Display preferences are saved in the browser. If the user changes PC or browser these preferences are lost.

⚠ The calculation of the alarm times :is only visible in "Analysis" mode and depends on the requested display period. Over a requested period, it is possible not to find the moment when the alarm is triggered. In some cases, the alarm time can therefore be zero, even if the measuring point is in alarm.

d) Last alarms

Clicking on "Last alarms" results in the display in a table by My Sirius of all the last alarms which have occurred. For each measurement point, MySirius displays the type of alarm, the alarm date, the state (acknowledged, snooze, ...), the acknowledgement information (if the alarm has been acknowledged).

For the obsolete alarms « to be justified », a button « Justify... » allows opening of the "Alarm justification" window and justification of the alarm by:

1. entering a "cause" to be selected from a pre-established list of causes or by manually entering a cause if there are none which correspond.
This list is identical to the one proposed for the acknowledgement of an alarm.
2. the characterization of the impact that this alarm could have had on the products.

Remark: Only the threshold alarms are present on this screen. The history on this screen is 15 days. To see the previous alarms, you must refer to the activity log.

e) Configuration

This tab displays the configuration of the monitored unit and of the measurement points. If the user has modification rights, a « Modify... » button will link to the « Administration » section to enable the necessary modifications.

V. ALARM MANAGEMENT

When alarms are triggered, they are shown in several ways :

- In the menu bar,
 - The number with red background on the “Exploitation” module tab indicates the number of units in alarm threshold alarms
 - The number with blue background on the “System” module tab indicates the number of devices in alarm technical alarms

In the body of the display window, the monitored units in alarm appear in red when the “Exploitation” module is selected and the devices in blue when the “System” module is selected

The possible actions on the alarms are:

- Acknowledge, take in charge and snooze for the threshold alarms
- Validate or take in charge for the technical alarms

1. Acknowledge / Take in charge a threshold alarm

To perform this action following the reception of a message or by observation on the application, one has to select the measurement point which is in error state in the monitored unit vignette “Exploitation” tab); the vignette expands and reveals the button:



Click on Acknowledge:

- A window opens allowing either acknowledgement or taking in charge of the alarm
 - **To acknowledge**, the operator must:
 - * enter the cause of the triggering of the alarm from a pre-established list of causes. If none correspond, he can manually enter one. This action stops all reports and reinitializes the alert process.
 - * He can enter a corrective action. This option can be required according to the configuration performed in the general preferences.
 - * He can also enter a notion of criticality according to the impact that this overrun may have had on the monitored products.
 - **The taking charge** allows time to correct the problem encountered. In this case the operator chooses to take charge then enters the time necessary to perform the correction. This action :
 - * Suspends all the other planned alarm reports
 - * Displays the taking charge  icon in the title bar of the device vignette while maintaining it visually in error state (red background). A mouseover of this icon displays the name of the operator having performed this taking charge as well as the response time interval defined.
 - * Reminds the operator having performed the taking charge at the end of the defined time interval
 - * Restarts the alert cascade of the monitored unit in alarm after a 10 minutes period
 - * Allows the operator to take again charge if he doesn't have the time to react.

2. Snoozing an alarm

Snoozing an alarm extends the overrun duration authorized before reacting. When the operator clicks on “Snooze”  he will be invited to enter a time interval at the end of which he will be again notified if the problem is still present.

 This time interval cannot exceed the initial authorized overrun duration

- If the monitored unit is still in alarm at the end of the snooze, the alert is triggered again. It will not be possible to perform another one. Only acknowledgement or taking in charge will be possible.
- If the monitored unit is no longer in alarm at the end of the snooze, the alarm is no longer to be acknowledged but rather to be justified.

3. Justifying an alarm

The alarms are triggered as they arise. It is possible that an alarm initially triggered is replaced by a new alarm or a re-triggering following a snooze. In this case, the 1st alarm takes the status of an alarm **to be justified** whereas the new alarm is **to be acknowledged**

- The justification of the alarm is performed in the same way as for *the acknowledgement of the alarms*.
- The alarms to be justified are accessible via *the indicator of alarm to be justified* or via the *unit data sheet*

4. Validate or Take in charge for technical alarms

To perform this action following reception of a message or by observation on the application, one has to select the vignette of the device in error state ("system" tab). It expands and reveals the button:



- A click on "Validate" validates the action, cancels all the alarm reports and reactivates the process of detection of technical alarms. There is no cause to enter.

- Taking in charge  allows time to correct the problem which has arisen. In this case the operator chooses the taking in charge then enters the time needed to perform the correction. This action:

- Suspends all the other planned alarm reports

- Displays the taking in charge  icon in the title bar of the device vignette while maintaining it visually in error state (blue

background). A mouseover of this icon displays the name of the operator having performed this taking in charge as well as the response time interval defined.

- Reminds the operator having performed the taking in charge at the end of the defined time interval
- Takes up again the reports at the point where they were interrupted
- Allows the operator to take again in charge if he hasn't had the time to intervene.

VI. « SYSTEM » MENU

The body of the window is divided in 2 : the indicators on the left and the equipment data sheets on the right. The indicator section on the left is the same as for the « Exploitation » menu.


In the same way as for the exploitation, an action bar composed of different button groups is displayed in the section on the right:

-  **All (17)** **In alarm (5)** **Bookmark (0)** ) Button group enabling the filtering of the visible devices : « All », « In Alarm ».
-    Button group for choosing between the modes « Mini Vignette », « Vignette », « Table » and « Layout » (if the “Location” module is active).
- **Recorder (8)** **Gateway (2)** **Relay Alarm (0)** Button group for reorganization enabling grouping by device type (Nano SPY T, Nano SPY TH, SPY RF N1, ...), by function (recorder, gateway, ...), by family (SPY RF, Nano, LoRa) or by function and family

In table display, the devices are automatically grouped by family and function

1. « Thumbnail » mode

The vignettes are identical to those of the « Exploitation » menu but the displayed data are not the same as a function of the device type.

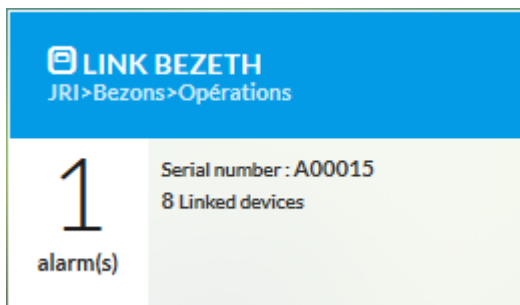

In the heading, MySirius identifies the device type with the help of a pictogram of its serial number as well as its location path.

In the lower part of the vignette, the left frame displays the number of technical alarms. If there is at least one alarm, the heading background turns blue

The « Information » section depends on the device type:

- Recorders:

MySirius displays the serial number of the recorder, its location and the IDs of the communication devices to which it is connected and the monitored unit in which it is placed.

- Communication devices (Nano SPY LINK)

MySirius displays the name given to the Nano SPY LINK as well as the number of (recorders, relays, alert modules) which communicate via this modem.

- Alarm module and/or relay:

MySirius displays the serial number of the Nano SPY ALARM and the number of recorders which communicate via this relay.

Clicking on the vignette expands it to reveal the date of the last message (last communication), information specific to the device and its alarms.

For the Nano SPY, MySirius displays:

- The model with probe type and length
- The version
- The battery level
- The radio level (RSSI)

For the Nano SPY LINK et ALARM, are displayed:

- The version
- The list of devices which communicate via the device

For the LoRa® SPY, this remains to be defined as a function of the types and of the network (LAN, WAN)

2. « Mini-thmbnail » mode

To permit the display of more devices at the same time, there is a « mini-vignette » mode. In this mode, only the header bar of the classical vignette is displayed along with the number of alarms. Clicking on the mini-vignette enlarges and expands it for visualizing all information.

0  A00001	0  AA16265003 JRI>Bezons	0  AA16265004 JRI>Bezons
0  JR0000000000	0  MS1710900026	0  SY1608100004


3. « List » mode

The different devices are grouped by family (SPY RF, Nano SPY, LoRa® SPY) and function (recorder, modem, ...) and displayed in table form
The table shows the same information as in vignette mode.

4. « Map » mode

If the « Location » module is not activated, this button  will not be visible


If the module is active, the button is visible and enables the display of the devices (Sensors and Gateways) position . See « Map management » in the adminsitartion guide.

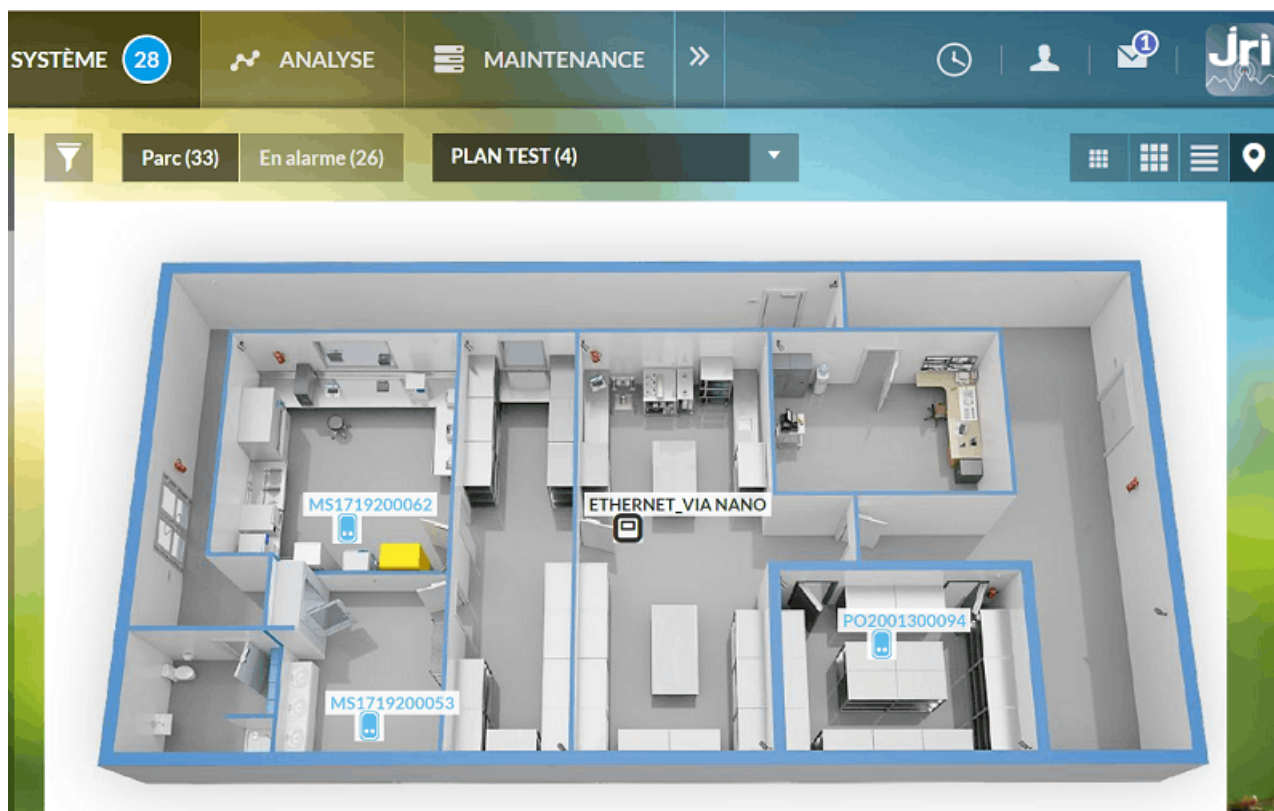

VII. « ANALYSIS » MENU

1. Standard operation

This menu item enables access to the screen for analysis of the measurement point data.

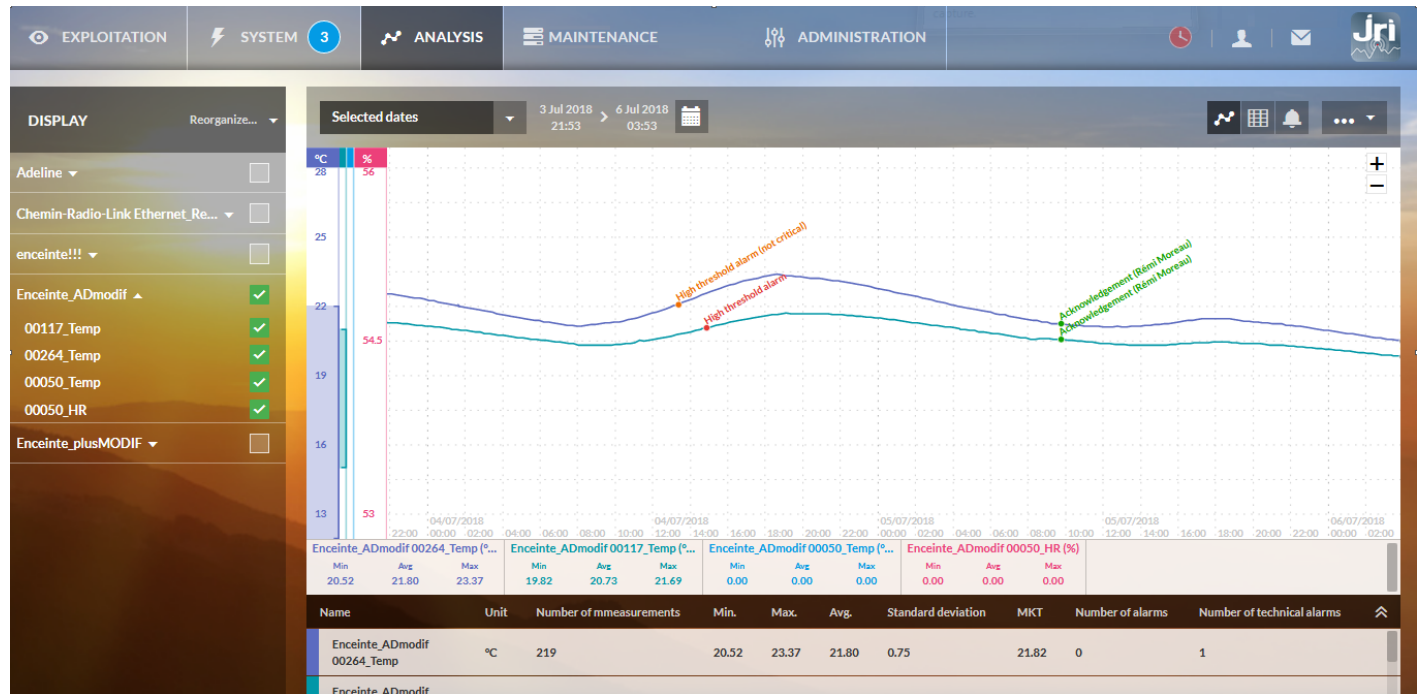

The monitored units are displayed in the left column. Using the « reorganize » button it is possible to display them by batch, by zone, by model or by alphabetical order. The user only sees the monitored units that he has the right to see (those of his batches).

Each monitored unit can be expanded to display its measurement points.

To analyze the data, one must check either the measurement points or directly the monitored units; in this case all the measurement points of the selected units will be checked by default.

The measurement points selected are displayed in the righthand section of the screen.

- The thresholds of the selected measurement points are materialized by a mark of the same color as the curve, on the axis of the ordinates (temperatures).
- The measurement points are identified under the time axis below the curves. A mouseover of a measurement point displays its curve highlighted with the thresholds materialized.
- A table of statistics is also displayed below the graph or the table of values. For each measurement point one finds
 - its identification
 - the number measurements displayed (period visible on the screen)
 - the measurement unit (°C, %, ...)
 - the mean
 - the MKT (if °C or °F)
 - the minimum
 - the maximum
 - the standard deviation
 - the number of threshold alarms
- When moving the mouse pointer in the curve display zone, the time-stamped value of the closest measurement point or of all the curves aligned on the pointer are displayed. The display depends on the choice made in the graphic display options
- It is possible to enter a comment by positioning the mouse on a point of one of the displayed curves.

The righthand section also contains an action bar above the table of values or of the curve enabling action on the displayed data.



It is possible to choose the displayed period:

- Either by a predefined period
 - Today
 - Yesterday
 - Current week
 - Last week
 - Current month

Depending on the selection, the start and end dates are displayed on the right.

- Or by selected dates
 - The « calendar » icon enables selection of the dates to modify the selection.

Start date

<

DECEMBER 2017

>

Mo	Tu	We	Th	Fr	Sa	Su
27	28	29	30	1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31
1	2	3	4	5	6	7

+

12 December 2017

–

+

0

–

:

0

–

End date

<

DECEMBER 2017

>

Mo	Tu	We	Th	Fr	Sa	Su
27	28	29	30	1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31
1	2	3	4	5	6	7

+

13 December 2017

–

+

0

–

:

0

–

✓

Choose the display mode

- The buttons  enable the choice of the mode of display of the measurements, to change from graph mode to table mode and inversely. This mode change does not modify the selected period.
- By clicking on the , the alarm statistics appear according to what has been configured in the **"Options"** menu of the other actions menu.

Choosing other actions

- The menu button  allows access to different functions:
 - Print the graph : The printout contains the graph, the monitored unit name and the measurement points (with min, max, mean) as well as the start and end dates.
 - Export the measurements in CSV
 - Create or load an archive.
 - Options : For managing the graphic display preferences
 - Add a comment: To add a comment on the curve for a measurement point or for the monitored unit


©JRI

User guide - 2.1

25/35

a) Manual Data Download

If data is missing on a graph after automated data recovery attempts (possible cause: communication failure), a manual data download (from the recorder MySirius) can be done by clicking on the **DOWNLOAD MEASURES** button.

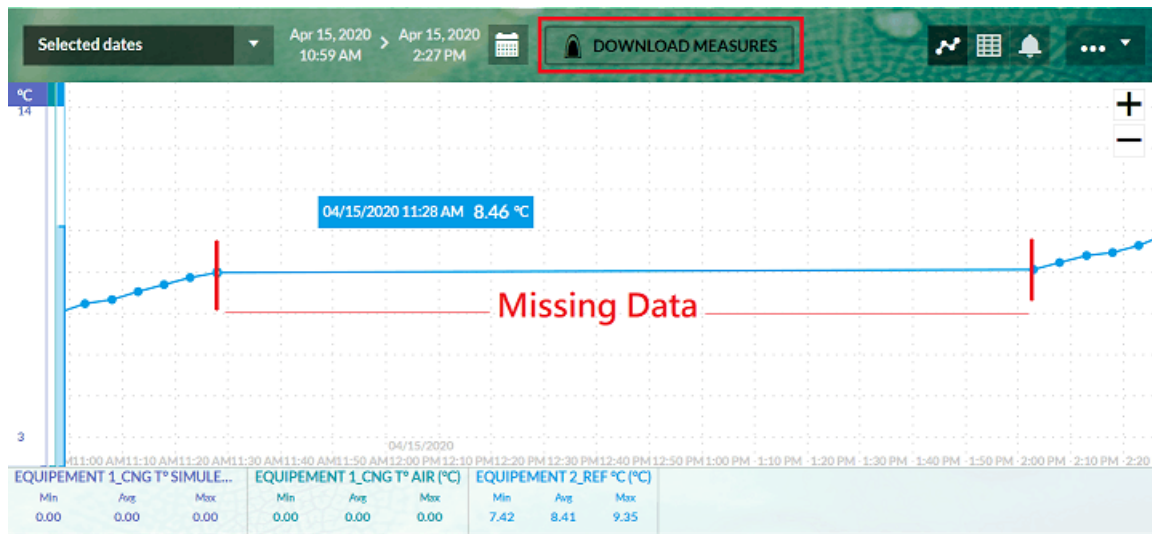

b) Options

These functionality allows to the user to personalize the graphical display and alarms statistics. He can choose:

- **For graphic display**
 - Always display thresholds : signifie that in analysis the lines that show threshold are always visible for all grph selected
 - Event label display : signifie that all the events or commentary are readable. Otherwise you must mouseover the event dot on the graph to display it.
 - Display of measurements at mouseover of the curve : This option specifies which measurement points are displayed at mouseover (all or the closest)
 - The type of scale (dynamic or static) : In dynamic, the scale is adjusted regardin min and max values of the displayed area
 - **For measurement table display**
 - Activation time alignment : this option allow you to align data that are a little bit not synchronized. You are invite to enter the gap for alignment
 - **For alarm statistics**
 - Exceeded Time : Sum of all overruns (above or below except allowed overrun duration) over the period displayed in graphic mode
 - Time in alarm : Period on which the unit is in alarme since triggering of the threshold (at the end of the allowed overrun duration) until come back on the good side of the threshold. If the period displayed in graphic mode shows more than one alarm, the time in alarm will be the sum of all periods in alarms.
 - Mean acknowledgment time : Time taken by the user to acknowledge the alarm of a unit. This time is from the moment the alarm is triggered (at the end of the allowed overrun duration) until the acknowledgment by the user over the period displayed in graphic mode. If on this periode there is more than one acknowledgment, it will be the mean time of all acknowledgments.
- These three criteria can be calculated:
- * by differentiating or not high and low thresholds
 - * by differentiating critical and non-critical thresholds
- Display preferences are saved in the browser. If the user changes PC or browser these preferences are lost.

⚠ The calculation of the alarm times depends on the requested display period. Over a requested period, it is possible not to find the moment when the alarm is triggered. In some cases, the alarm time can therefore be zero, even if the measuring point is in alarm.

2. Archive management

a) Archive creation

In the menu of the « Analysis » window  the « Create an archive » request allows the user to save the « raw » measurements of

the period displayed on the screen in an encrypted file useable only with My Sirius (*.msarch)


Before creating the archive, one should adjust the displayed period and choose the monitored units concerned before archiving the data.

An archive enables the visualization and analysis of the data from one or multiple units which may have been deleted, or which represent a specific period.

b) Loading an archive

In the same menu, the « load an archive » request enables the display of the measurements contained in the file and their manipulation using the tools available in MySirius.

To load an archive, simply drag and drop a file *.msarch into the window

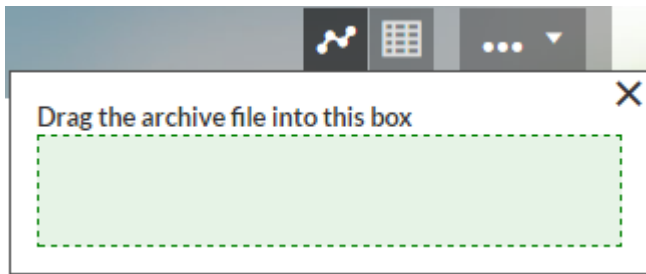

If the file or the data are not correct, the user is notified.

When the archive is loaded:

- A message bar appears indicating that an archive is being consulted.

You are now consulting an archive : archive (1).msarch (Date : 4 Jul 2017 16:36)


Close archive

- It is not possible to see the measurements beyond the displayed dates (archive created from value table mode)
- If the archive was created from the graph, it contains more measurements than the recorded period. The user can consequently shift by one period to the left and one to the right.
- The list of units in the left-hand section is replaced by the list of the monitored units present in the archive.
- It is not possible to save a new archive.
- The measurements outside the archive will not be displayed, even if they still exist in the database.

When the user closes his archive (button « Close archive » in the red bar), one returns to the preceding display (before loading the archive).

VIII. INDICATOR MANAGEMENT


The indicators are visible on the « Exploitation » page and on the « Système » page. The indicators are the same on these two pages.

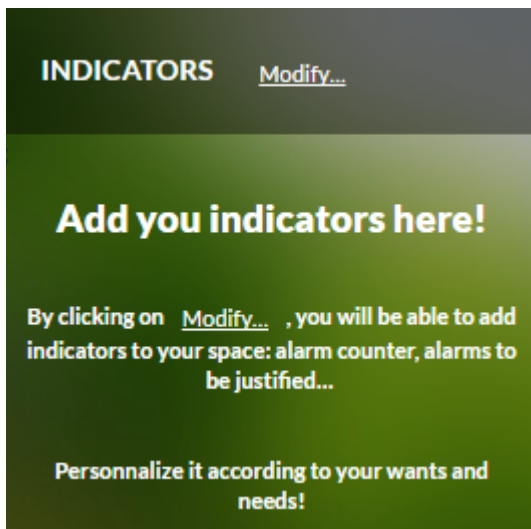

Each user can choose the indicators he wants. Depending on his rights, some will not be accessible (ex: Technical alarms when the user does not have access to « System »).

At first, the « Indicators » panel is empty. The user is invited to add indicators.

The « Modify » button opens a window enabling the choosing of the desired indicators. It is also by this window that they can be removed.

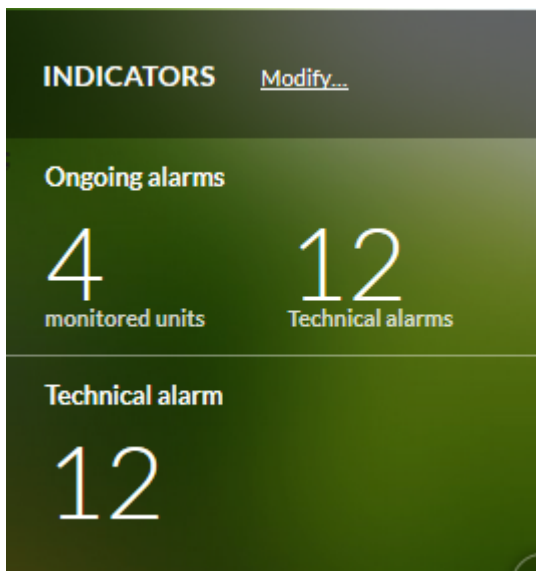

The chosen indicators are saved and linked to the user ID. They will be saved and reloaded at each connection.

When the user clicks on an indicator value, he is redirected toward the corresponding data.

List of available indicators:

Current alarms

Double indicator with on one side the monitored units in alarm and on the other the technical alarms.

Clicking on the number of units in alarm redirects the user to the « Exploitation » screen filtered by « In alarm ». Clicking on the number of technical alarms redirects the user to the « System » screen filtered by « In alarm ».

Units in alarm

Displays the number of units in alarm.

Clicking on the number of units in alarm redirects the user to the « Exploitation » screen filtered by « In alarm ».

Technical alarms

Displays the number of current technical alarms

Clicking on the number of technical alarms redirects the user to the « System » screen filtered by « In alarm ».

Inhibited units

Displays the number of inhibited units.

Clicking on the number of inhibited units directs the user to the « Exploitation » screen filtered by « Inhibited »

« Snoozed » units

Displays the number of snoozed units

Clicking on the number of snoozed units, the user is redirected to the « Exploitation » screen filtered by « Snoozed »

Units taken in charge

Displays the number of units taken in charge

Clicking on the number of snoozed units, the user is redirected to the « Exploitation » screen filtered by « Taken in charge »

Technical alarms « taken in charge »

Displays the number of technical alarms currently taken in charge.

Clicking on the number of technical alarms redirects the user to the « System » screen filtered by « In alarm ».

Taken in charge

Double indicator, grouping the number of units and the number of technical alarms taken in charge

Alarms to be justified

Displays the number of alarms to be justified.

Clicking on the number opens a page with the list of alarms « To be justified ».

Power error

Displays the current number of power error alarms

Clicking on the number redirects the user to the « System » screen filtered by « In alarm ».

Sensor error

Displays the current number of « sensor error » incidents

Clicking on the number of sensor errors redirects the user to the « System » screen filtered by « In alarm ».

Communication error

Displays the current number of « communication error » incidents.

IX. AUDIT TRAIL

The audit trail is used to view all the operations performed by users or by the system as well as everything related to the alarms.

Traced actions are defined by :

- The date of the action
- The type (category) of the action
- The user who performed the action or MySirius when it comes to a system action

For some actions, you can also find the details by clicking on “+”.

The MySirius audit trail is :

- Secure and non modifiable by MySirius users regardless their profile
- Generated by MySirius and only by MySirius
- Complete: All actions performed by the users or by the system (MySirius) are traced.
- Saved throughout the duration of the system.

1. Access

To Access the audit trail, click on the “My Profile” button in the MySirius main menu bar still displayed on the screen (see “user account management”) and on **Audit Trail**. All MySirius default profiles will have this access (Administrator, Batch manager, Simple user...). However, with an “Advanced” license it will be possible to create a specific profile to prevent audit trail access to any type of user.

The information displayed will depend on the type of license subscribed.

- **Initial** : No access to the audit trail
- **Serenity** : Only alarm log (threshold alarms, technical alarms, acknowledgment, taking charge, validation)
- **Advanced** : Complete audit trail

Once the audit trail window is open, the user has several commands at his disposal allowing him to optimize the display of the information sought for:

In the left column, the user can use filters:

- **Start and end date** : To filter on a given period.
- **Units** : to display only the lines of a monitored unit (multiple selection)
- **Type** : to display only certain types of action (multiple selection)
- **User** : to display only the actions of a user (simple selection)

In the action bar of the audit trail, it is possible to group together the lines of the same unit, the same alarm or the same user to view them in the same block...

There are 2 levels of grouping possible. The choice lists are directly proposed by MySirius

2. Export

Once all the filters activated, it is possible to export the contents of the audit trail displayed on the screen :

- in PDF format
- in CSV format

X. USER ACCOUNT MANAGEMENT

From the menu, the user has access to his profile



This screen is separated into two tabs:

- One for personal data,
- One for alert management.

1. Personal data

The user can see his login ID, his name, his profile, the batches that he has the right to see and the alert groups in which he is placed.

He can modify his first and last names, change his password and choose his graphic theme (screen background color).

2. Alert management

The user can:

- Manage all his alert means (telephone number, sms or email)
- Choose whether to receive the curve in the alert emails
- Manage his alert lists.

A list groups together the alert means that MySirius will use to notify the user. These alert means will be implemented one after the other. He can specify a waiting interval between each alert.

The user can create as many alert lists as he wishes as a function of his schedule.

! Only the alert means declared by the user can be used

i To modify an alert list, click on its name.

ALARM LIST CREATION

Name

Alerts

#	Delay	Alert	
1	0	philippe.guillet@jri.fr (Email)	
2	15 min	+33 6 90 90 90 (SMS)	

+ ADD...

CANCEL

SAVE

- Managing the alert schedule

The user can divide his weekly schedule into periods and can choose the alert list that he wishes to use for each one.

MODIFICATION OF THE USER

Move the cursors ▼ to construct your schedule then drag/drop an alert list in each of the time slots.

Office
Out Off Office
No alert

	0 ⁰⁰	2 ⁰⁰	4 ⁰⁰	6 ⁰⁰	8 ⁰⁰	10 ⁰⁰	12 ⁰⁰	14 ⁰⁰	16 ⁰⁰	18 ⁰⁰	20 ⁰⁰	22 ⁰⁰	0 ⁰⁰
Monday	0 ⁰⁰	Out Off Office				9 ¹⁵	Office				18 ³⁰	Out Off Office	
Tuesday	0 ⁰⁰	Out Off Office				9 ¹⁵	Office				18 ³⁰	Out Off Office	
Wednesday	0 ⁰⁰	Out Off Office				9 ¹⁵	Office				18 ³⁰	Out Off Office	
Thursday	0 ⁰⁰	Out Off Office				9 ¹⁵	Office				18 ³⁰	Out Off Office	
Friday	0 ⁰⁰	Out Off Office				9 ¹⁵	Office				18 ³⁰	Out Off Office	
Saturday	0 ⁰⁰												
Sunday	0 ⁰⁰												

CANCEL
SAVE

- Managing exceptional periods.

An exceptional period is composed of a name, a start date, and end date and an alert list to be used during the period.

In the event of alarm, MySirius uses by default the weekly schedule but if an exceptional period is found for the alarm date, it is the list for this period which will be used in place of that of the weekly schedule. The user can thus choose not to be notified during these exceptional days (ex : holidays, vacation...)

3. User preferences

Two types of preferences are available in MySirius

- General display preferences

During consultation in the « Exploitation » and « Maintenance », menus, the choices made by the user (display mode, filter, « Indicator » column width) will be saved automatically in the current navigator.

The specific filter (entered name of unit or device) is not saved. This is a temporary filter.

If the user closes his navigator and reconnects later, his previous choices will be pre-loaded.

On the other hand, if he consults using another navigator or using another PC, his last choices will not be carried over.

- Graphic display options

The options « Options » requeste accessible from the le menu  of the « Unit Information Sheet » and of the « Analysis » tab enable the definition of the preferences for the display of the curves and of the measurement table.

Once defined, they will be applied to all measurement curves and tables even after disconnection followed by reconnection

OPTIONS

ANALYSIS

REPORTS

HELP

GRAPH

Event label display

YES NO

Display measurements at mouse over

YES NO

Measurement point displayed at mouseover

ALL THE CLOSEST

Scale type

DYNAMIC STATIC

Always display thresholds

YES NO

MEASUREMENT TABLE

Measurement schedule alignment

YES NO

Maximum gap for time alignment


5 minute(s)

CANCEL

APPLY

4. Documents

Access to all users documents is done from the Profil button by clicking on MY DOCUMENTS

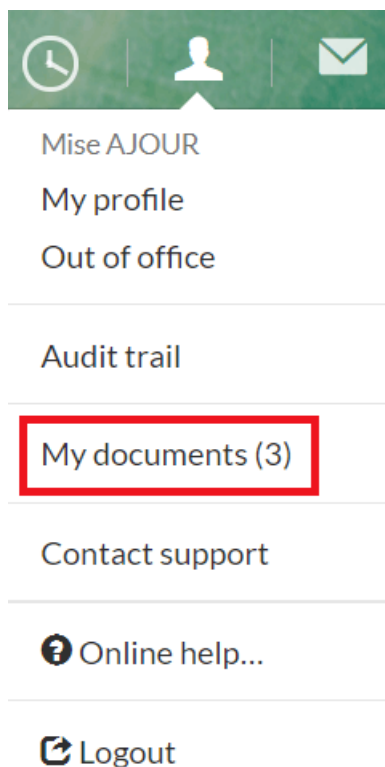

Documents are organized in 5 main categories : METROLOGY - CONTRACTS - REPORTS - INTERVENTION - QUALITY. A click on each section displays the list of the documents.

5. Messages

Messages can be exchanged between MySirius users of the same customer. A message waiting indicator can be shown. This service can also be used by JRI to push information to MySirius users.



When sending a new message, a “required reading” option can be selected.

MESSAGE

To

Select the recipients

Cci recipients

Select Cci recipients

Required reading

YESNO

Subject

Enter subject

Message

Enter your message

CANCEL

SEND

MySirius cloud application allows users to contact directly the JRI support team by clicking on CONTACT SUPPORT button



Mise AJOUR

My profile

Out of office

Audit trail

My documents (3)

Contact support

Online help...

Logout

XI. MAINTENANCE MODULE

1. Reporting

 The reporting function is a part of the "Maintenance" module but available even if you have not subscribed to the activation of the module.

The "Reporting" function allows the user to create automatic reports to have at a given moment an overview of the status of the current monitoring. So it is possible to create:

- Weekly or monthly reports Rapports hebdomadaires ou mensuels.
- Statistics, alarms, measurements, graphical...reports

Each user whatever its profile can manage (creation or suppression) his own reports.

2. Report management

Click on "Maintenance" in the MySirius general menu bar then on "Reporting" indicator. The list of configured reports is displayed as a table with:

- The name of the report
- The name of the user that create the report
- The type of the report (graphical, statistics, history...)
- The edition frequency
- The last edition date
- The link of the last edited report
- The next edition date

A user will see all the programmed reports even they concerned units or device he can't consult.*

The action bar above the table allows the user to choose the reports to display using available filters but also the adding or deleting reports actions.

In the left column named "LAST REPORTS" are the last edited reports. To retrieve an earlier report, you must open the "Document Space" by clicking on the command below the column heading.

a) **Creating a report**

Click on "Maintenance" in the MySirius general menu bar then on "Reporting" indicator. Then click on the button "Creating a report" In the action bar above the list of the report.

A window opens asking you to name and choose the type of the report you want to create. Make your choices on the different screens that will be proposed:

- **Report targets** : Choose the units or batches on which the report will relate
- **Recipients** : Choose the report destination :
 - Either send it to the "document space" (space dedicated to store documents as reports or metrological certificate in a future release)
 - Either send it by mail to one or more recipients
- **Frequency of execution** : Periodicity of report edition

Before validating the report creation a summary will be displayed. Once checked, . une fois validé, it completes the list of existing reports.

b) **Deleting a report**

Click in the checkbox in front of the name of the report to delete and then on the button representing a bin in the action bar above the table.

c) **Editing a report**

Click on the report name to modify then the window summarizing the report opens. Then click on "Edit" to enter modification mode.

The report modification is done in the same way as the creation excepted that the choices are preset regarding the initial report configuration. All you have to do is to modify or pass to the next screen until the end. Once the summary displayed, validate the modification of the report.