

15th March 2021

COMET Cloud supports Web Sensors

Roznov pod Radhostem, CZ: COMET SYSTEM, s.r.o., company specializing to measurement instruments, today announced improvements of Cloud data acquisition platform COMET Cloud to version 2.1. This version brings many new features including support for Web Sensors devices. COMET Cloud supports all families of Web Sensors including t-line, p-line and h-line devices. COMET Cloud is available not only for newly shipped Web Sensor devices but for older already deployed devices as well. Three months trial period is available for all Web Sensor devices. Free trial period allows to test COMET Cloud features without additional costs. After expiring trial period may to be COMET Cloud subscription prolonged using the Top-Up Voucher. One year subscription of Web Sensor costs one credit. Price of one credit is according to COMET price list.

COMET Cloud is unique platform which allows data acquisition, storing data and analysing data provided by COMET measurement instruments. COMET Cloud supports sending alarm emails when values measured by the device exceed pre-set thresholds. COMET Cloud version 2.1 supports following device families:

- Sigfox devices
- Mobile dataloggers with built-in GSM modem
- WiFi sensors
- Web sensors (t-line, p-line, h-line)

Device setup – sensing interval 5 min or higher

COMET Cloud allows to get data from Web Sensor devices with interval 5 minutes or higher. Recommended interval is 10 minutes. Incoming data will be blocked automatically after receiving 100 messages when sending interval inside Web sensor is lower than 5 minutes. When incoming data from Web sensor are blocked due to wrong sending interval, this need to be corrected at the device setup. After that, the device can be unblocked inside COMET Cloud (as shown below).

My Devices TESTOVANÍ

You have no filter set up

Data ingestion from this Web Sensor is banned due to use of unallowed sending interval lower than 5 minutes.

	Id	Time	ch1
WebSensor - 20980062	20980062	Data ingestion banned	
WebS		> How to configure Web Sensor to send data to COMET Cloud :14	ERROR 0

> Allow data ingestion

Device setup – SOAP server address

To be the Web Sensor device able to send data into the COMET Cloud, it is required to configure the SOAP Server address. This SOAP server address is unique for each Web sensor inside COMET Cloud and is tied up with device serial number. It cannot be used same address for multiple devices. Procedure how to determine SOAP server address is described at chapters below.

Due to different SOAP server address for each device is security risk by external attacker mitigated. Be aware that SOAP server address needs to be kept in secret. From this reason, it is recommended to enable security inside Web Sensor.

Connecting older devices


Devices shipped before 16th March 2021 and devices already deployed at end users does not have registration card for COMET Cloud. These devices can be still connected into COMET Cloud. Almost all produced Web Sensor devices may to be connected into COMET Cloud (even 10+ years old devises). Connection procedure for older devices:

1. Please make sure that the device is equipped by compatible firmware version (see chapter [Firmware compatibility](#)).
2. Device registration into COMET Cloud can be done using device serial number and device MAC address. This information you find at device factory label. These information needs to be inserted into registration form or during adding device (*Administration / Devices / Add device*) with format as shown below. Serial number and MAC address are separated by the colon.

The screenshot shows a registration form with the following elements:

- Five circular icons representing different countries (UK, France, Spain, Germany, Poland) at the top.
- A text input field containing the example value "08980089:00-20-4a-de-6a-5f". Below this field, a red label reads "serial number : MAC address". A red arrow points to this field.
- An "Email" input field.
- A "Password" input field.
- A "Password check" input field.
- An "Organization name" input field.
- A blue "Create account" button, which is pointed to by a red arrow.
- A dark grey "Sign in" button below the "Create account" button.


3. After the device is registered into COMET Cloud using serial number and MAC address, it needs to be determined SOAP server address. Address can be determined at list of devices (*My Devices*) and option *How to configure a web sensor to send data to COMET Cloud* accessible via left mouse click.

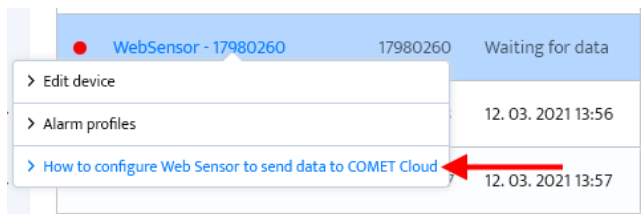

Administration > Devices > How to configure Web Sensor to send data to COMET Cloud

Device: WebSensor - 17980260 (Id: 17980260)

How to configure Web Sensor to send data to COMET Cloud:


- Go to the Web Sensor web pages, choose Settings, choose SOAP Protocol
- Enable SOAP Protocol and configure it this way:
 - SOAP server address `http://wsi.cometsystem.cloud/790ada24-a`  **COPY SOAP SERVER ADDRESS INTO CLIPBOARD**
 - SOAP server port 80
 - Sending interval choose 5 minutes or greater
- Confirm by the "Apply settings" button

Warning:

- Each Web Sensor has its own entry point in the COMET Cloud:
`http://wsi.cometsystem.cloud/XXXXXXXX-XXXX-XXXX-XXXXXXXXXXXX` Therefore, do not copy one address to multiple devices. But always use this feature to find the specific address for the device you want to configure.
- Sending interval less than 5 minutes is not allowed.
If you use an interval of **less than 5 minutes**, the data ingestion for that **device will be banned** after a short time.

4. Final step is a setup Web Sensor. Navigate to device web setup (*Settings / SOAP protocol*) and set following parameters:

- Enable SOAP protocol
- Paste into SOAP server address the value generated by the COMET Cloud
- Set SOAP server port to 80
- Set sending interval as 5 min or greater

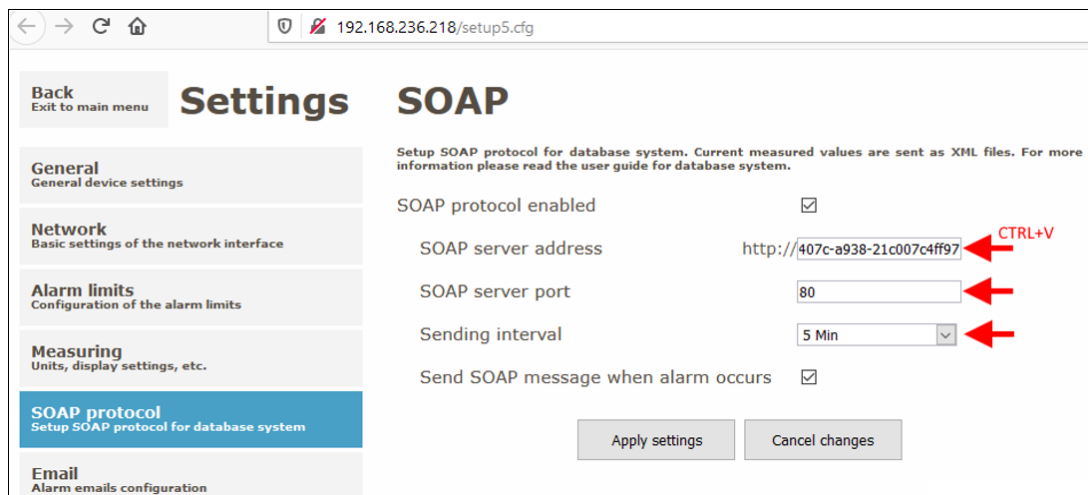



Back
Exit to main menu


Settings SOAP

Setup SOAP protocol for database system. Current measured values are sent as XML files. For more information please read the user guide for database system.

SOAP protocol enabled ☒

SOAP server address `http://407c-a938-21c007c4ff97`  **CTRL+V**

SOAP server port 

Sending interval 

Send SOAP message when alarm occurs ☒

Apply settings Cancel changes

Connecting new devices

Newly purchased devices (after 16th March 2021) are shipped with registration card. This registration card allows to connect Web Sensors into COMET Cloud. Connection procedure is:

1. Insert registration code from registration card into the form.

COMET Cloud registration

Device:	H6520
Serial number:	18980098
ID number:	----
Registration code:	263D-15B2-762E-CBAB

Do you have COMET Cloud account?

no yes

Registration code allows to:

- create a new COMET Cloud account and assign purchased device under this account
- assign the device to an account already created in COMET Cloud

Registration form interface showing fields for:

- Country selection (UK, Czech Republic, Spain, Germany, Poland)
- Registration code: 263D-15B2-762E-CBAB
- Email
- Password
- Password check
- Organization name

Buttons: Create account, Sign in


3. After the device is registered into COMET Cloud using registration code, it needs to be determined SOAP server address. Address can be determined at list of devices (*My Devices*) and option *How to configure a web sensor to send data to COMET Cloud* accessible via left mouse click.

WebSensor - 17980260	17980260	Waiting for data
> Edit device		
> Alarm profiles		12. 03. 2021 13:56
> How to configure Web Sensor to send data to COMET Cloud		12. 03. 2021 13:57

Administration > Devices > How to configure Web Sensor to send data to COMET Cloud

Device: WebSensor - 17980260 (Id: 17980260)

How to configure Web Sensor to send data to COMET Cloud:

- Go to the Web Sensor web pages, choose Settings, choose SOAP Protocol
- Enable SOAP Protocol and configure it this way:
 - SOAP server address `http://wsi.cometsystem.cloud/790ada24-a` 
 - SOAP server port 80
 - Sending interval choose 5 minutes or greater
- Confirm by the "Apply settings" button

Warning:

- Each Web Sensor has its own entry point in the COMET Cloud:
`http://wsi.cometsystem.cloud/XXXXXXXX-XXXX-XXXX-XXXXXXXXXXXX` Therefore, do not copy one address to multiple devices.
 But always use this feature to find the specific address for the device you want to configure.
- Sending interval less than 5 minutes is not allowed.
 If you use an interval of **less than 5 minutes**, the data ingestion for that **device will be banned** after a short time.

COPY SOAP SERVER ADDRESS INTO CLIPBOARD

4. Final step is a setup Web Sensor. Navigate to device web setup (*Settings / SOAP protocol*) and set following parameters:

- Enable SOAP protocol
- Paste into SOAP server address the value generated by the COMET Cloud
- Set SOAP server port to 80
- Set sending interval as 5 min or greater


192.168.236.218/setup5.cfg


Back
Exit to main menu


Settings SOAP

Setup SOAP protocol for database system. Current measured values are sent as XML files. For more information please read the user guide for database system.

SOAP protocol enabled ☒

SOAP server address `http://407c-a938-21c007c4ff97` 

SOAP server port 

Sending interval 

Send SOAP message when alarm occurs ☒

Apply settings Cancel changes

General
General device settings

Network
Basic settings of the network interface

Alarm limits
Configuration of the alarm limits

Measuring
Units, display settings, etc.

SOAP protocol
Setup SOAP protocol for database system

Email
Alarm emails configuration

Firmware compatibility

Function of COMET Cloud was validated with latest firmware versions for Web Sensors. For older devices please make sure that device is equipped by same or higher firmware version as stated at table below. Latest firmware version can be obtained from technical support.

Web Sensor model	Firmware version	Firmware RTM
T-line Tx5xx and Tx6xx	1-5-7-04	2017-09-22
P-line P85xx / P86xx	4-5-8-1	2017-10-19
P-line P2520	Not supported yet	Support coming soon
H-line Hx5xx	9-5-0-01	2017-09-05

Technical support and feedback

Technical support is provided by distributor of the device. In case of any issue feel free contact us at email support@cometsystem.com. We highly appreciate feedback from end user side. Let us know about your experiences and potential improvements of our products.

Comet R&D team